


Item No. : HS32A-1

Operation Instruction

1. Product Outline

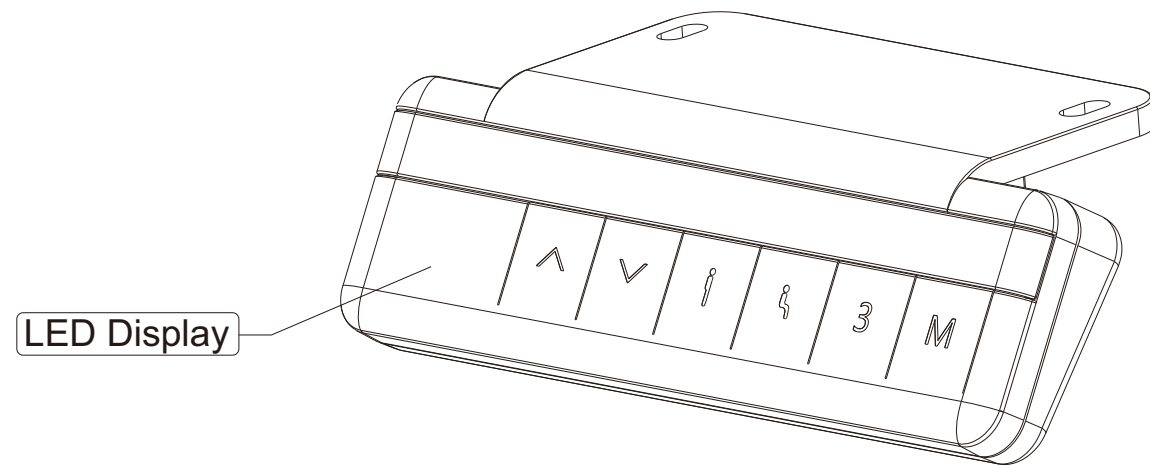

2. Product Specification

Button introduction: There are 6 buttons that "▲", "▼", "↑", "↓", "3", "4"

- (1) "▲" : Up button, used to adjust the height of the desk to move upward.
- (2) "▼" : Down button, used to adjust the height of the desk to move downward.
- (3) "↑" : Position 1, the user's saved first height position.
- (4) "↓" : Position 2, the second height user save.
- (5) "3" : Position 3, the user's saved third height position.
- (6) "4" : "M": Save button, used to save the height position.

3 : Operating Instructions

● Height Adjustable Function:

By pressing the "▲" or "▼" button, you can adjust the height of the lifting table up or down, and the current height will be displayed on the screen.

● Height-saving Function :

a. Use the up or down key to adjust the height of the lifting desk to the desired level, press the "M" save button, the displayscreen will show "5-"; then press the "↑" or "↓" or "3" key to save the height to position 1 or 2 or 3, and the corresponding display screen will show "5-1" or "5-2" or "5-3".

b. To automatically adjust the desk to a previously saved position, simply press the "↑", "↓", or "3" button.

● Adjusting Collision Sensitivity (Optional) :

a. By simultaneously holding down the "▲" and "▼" keys for 5 seconds, you can switch the sensitivity. One operation will switch to the next level, divided into 4 levels (A-3, A-2, A-1, A-0).

b. The display shows "A-0" means the anti-collision function is turned off; the display shows "A-1" means low sensitivity; the display shows "A-2" means medium sensitivity; the display shows "A-3" means high sensitivity.

c. When the desk rises or falls, it will rebound immediately when encountering obstacles to prevent damage.

d. If the display screen does not show any of the above codes when simultaneously holding down the "▲" and "▼" keys for 5 seconds, it means that there is no collision prevention function.

● Code Processing:

a. The LED display screen shows either "R5E" or "r5E". The user can long-press the down arrow "▼" key to make the desk run to the lowest or highest position, and then it will bounce back until it stops. At this point, the display screen will show the height number of the desk. The user simply needs to release the down arrow "▼" key to complete the reset operation.

b. If the display shows "E01" or "E02", please allow the table to rest for at least 18 minutes before using it again.

c. If there are other error codes and pressing the "▼" downward key does not respond, please check that the connecting cable is not damaged and properly connected. Disconnect the power for at least 10 seconds, then reconnect it. The screen will display either "R5E" or "r5E". Press and hold the "▼" downward key to reset.

d. If the desk still does not function properly after performing the above steps, please contact customer service for assistance.

Waste disposal



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.